

# Quik Net/Easy Net

## Set Up Instructions

### Setting Up Without the Stand

Step 1: Starting at one end, connect one pole onto the next, spreading the rings evenly along the poles. The red ring identifies the center of the net, and should be located over the red mark on the poles. This indicates that the net is evenly spread.

Step 2: Push one pointed end of the pole 5 to 6 inches into the ground. Approximately 10 feet away, push the other pointed end of the pole 5 to 6 inches into the ground. With the ends pushed into the ground properly, the net will hold firm.

### Setting Up Using the Indoor Stand

Net Pole

The stand can be used for any hard surface such as driveway, patio or deck where the poles cannot be inserted into the ground

10' Cord

4-Way Tee

**IMPORTANT NOTE: When assembling the stand be sure to firmly seat the PVC pipes into the fitting to prevent their coming loose during use.**

- Twist 6 inch pipes "A" with the nylon cord passing through them into each of the two 4-way tee "B" until pipe is firmly seated.
- Twist the 2 foot pipes "C" into each of the remaining openings on the 4-way tee, making sure that each pipe is firmly seated.
- Spread the two stand ends away from each other, until the cord is completely stretched.
- Assemble the frame and net as in Step 1 (above).
- Insert one end of the net and frame into one stand end, and allow the net and frame to rest lengthwise on the ground.
- Secure the opposite side of the stand by standing on it. Bend the net and frame and insert it into the other stand. You are now ready to use your Quik Net™!

NOTE: To assemble the stand permanently apply plastic cement (available at any hardware department or store) into the ends of the 4-way connector prior to assembling.

.TM

## Quik Net / Easy Net

### \*\*\*IMPORTANT SAFETY PRECAUTIONS\*\*\*

- 1) Tee the ball up within 6' - 8' from the net - but not so close that you could hit the net with your club. **DO NOT** use this product if you are not sure of your ability to drive the ball into the net.
- 2) **NEVER** allow anyone (people or pets) to stand behind the net or in any possible path of the ball should you miss the net or should the ball go through the net.
- 3) Do not set up the net where property damage could occur if the ball should miss or go through the net.
- 4) Use common sense, and all the same precautions as you would when playing golf. -
- 5) Inspect net before and during each use. If any rips or holes are found - **DO NOT USE!**  
(Note: Nylon cable ties available from any hardware store can be used to repair small holes in the net - be aware of any new holes which may open - and if adequate repairs cannot be made **DO NOT USE!** Your good judgment is needed.)

### \*\*\*WARRANTY\*\*\*

Dennco, Inc. guarantees its products for one year against defects caused by faulty materials or workmanship. In the event any defects are encountered, please return the parts directly to us, freight prepaid, for free repair or replacement, at our option. This guarantee does not cover damage caused by misuse or normal wear. Dennco, Inc.'s liability shall be limited to repair or replacement of defective product only. It is the user's responsibility to ensure that the net is set up in a way consistent with the safety practices stated above. This warranty gives you specific legal rights, and you may have other rights which may vary from state to state.

**IF ANY PARTS ARE MISSING OR IF ASSISTANCE IS NEEDED TO ASSEMBLE YOUR PRACTICE NET OR IF YOU HAVE ANY QUESTIONS ABOUT THE SAFE USE OF YOUR NET PLEASE CALL OUR TOLL FREE CUSTOMER SERVICE NUMBER:**

1-800-336-6264 / (NH) 603-898-0004

DENNCO, INC.  
21 NORTHWESTERN DRIVE  
SALEM, NH 03079